

MiFi ZTE: Activar Roaming Datos



altice
La red global
de los dominicanos

Activar Roaming Datos (versión móvil)

Paso 1.


1.1 Acceder en el navegador a: 192.168.0.1

1.2 Autenticarse.

Contraseña: admin

Paso 2.


Seleccionar: Ajustes de Red

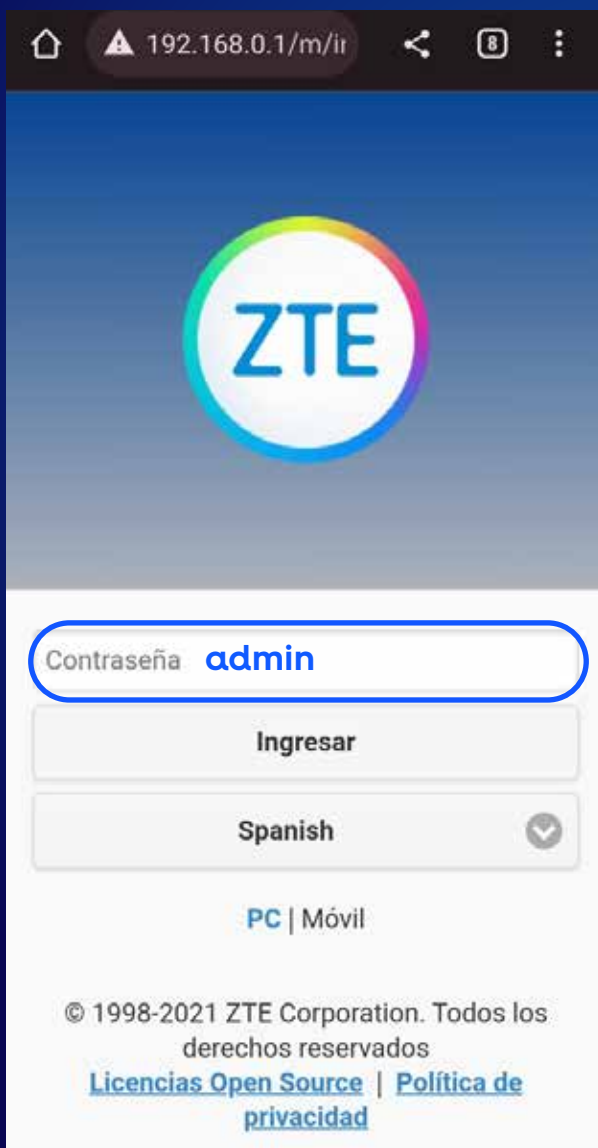

Paso 3

3.1 Apagar nube azul


3.2 Seleccionar: Modo de conexión.

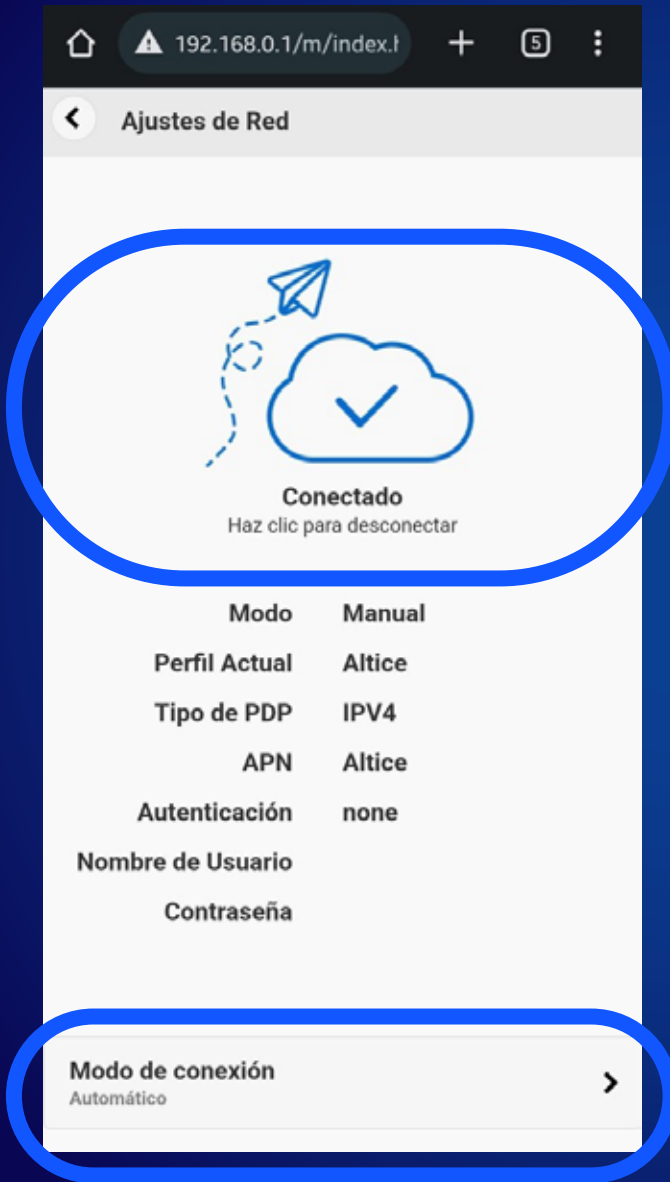

Paso 4.

4.1 Cotejar: Roaming Permitido.

4.2 Aplicar

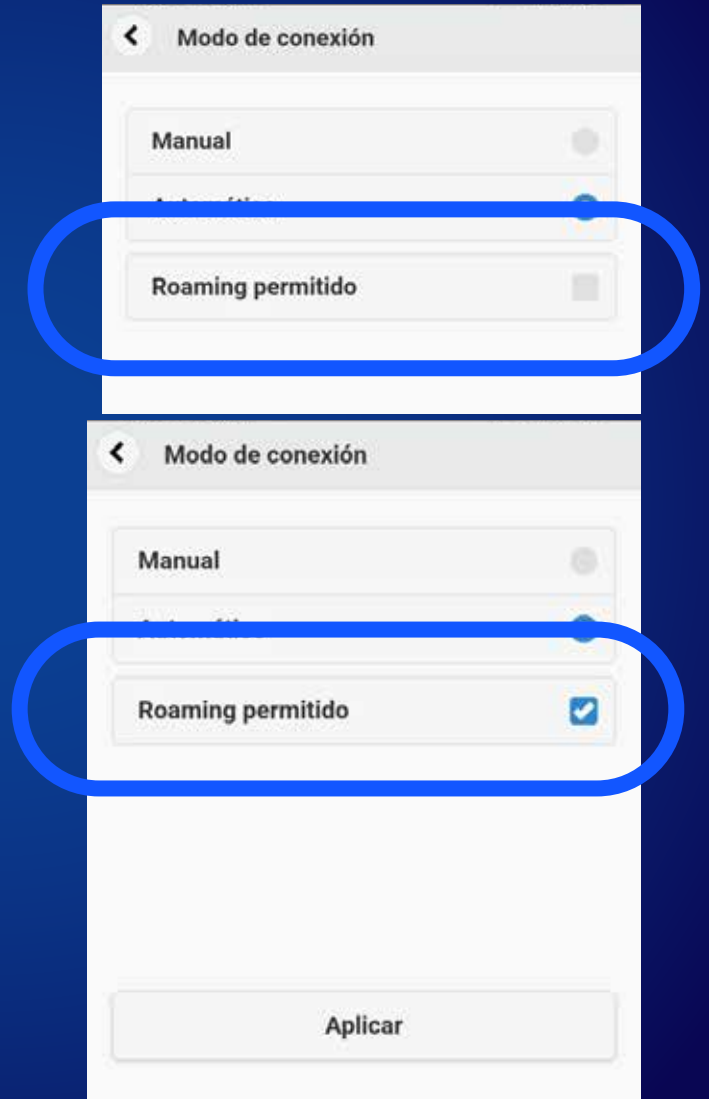

Paso 5.

Volver a encender la nube.




Activar Roaming Datos (versión desktop)

Paso 1.

1.1 Acceder en el navegador a: 192.168.0.1

1.2 Autenticarse: Contraseña > admin.

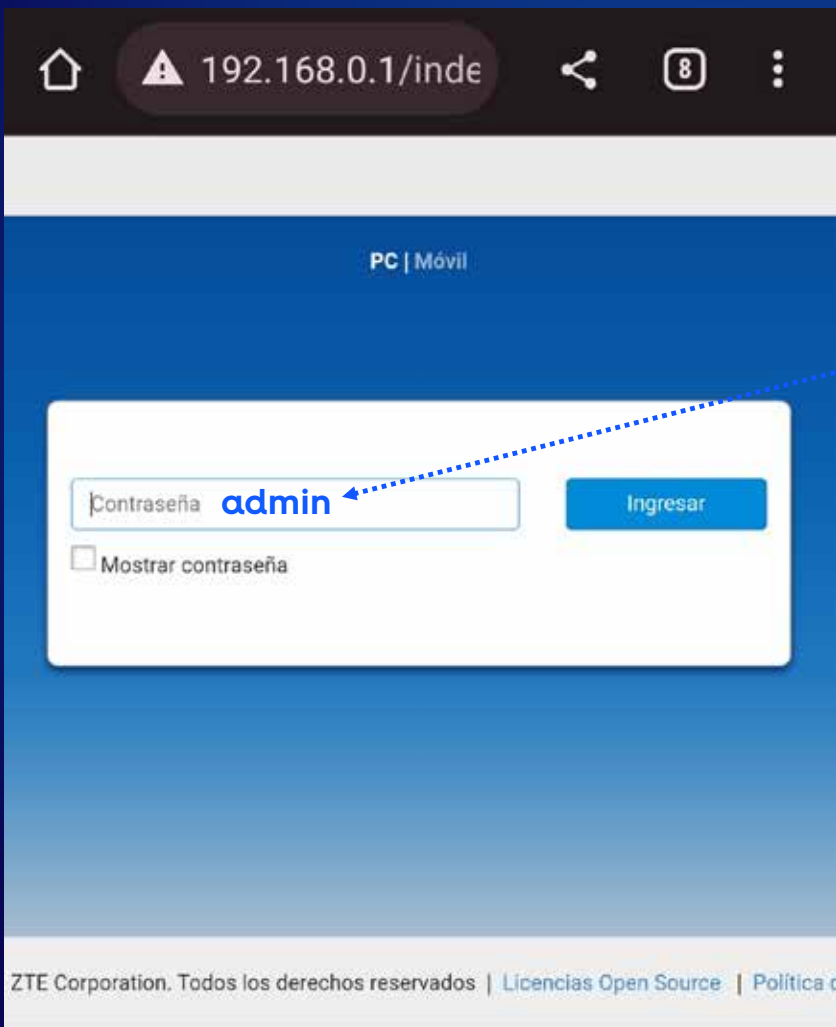

Paso 2.

2.1 Apagar switch LTE


2.2 Seleccionar: Configuración.

The screenshot displays the ZTE mobile management interface. At the top, the ZTE logo and SSID 'Altice_3E98' are visible on the left, and status icons for LTE, signal strength, Wi-Fi, and battery (83%) are on the right. Below the status bar, there are links for 'Apagar', 'Modificar contraseña', 'Cerrar Sesión', and 'Spanish'. The main content area is titled 'PC | Móvil' and features a navigation diagram with three steps: 1. 'Dispositivos conectados', 2. 'Mi router', and 3. 'Navegación en la red'. In the 'Mi router' section, the 'LTE' switch is turned 'OFF', and the 'Configuración' button is highlighted with a red arrow. Below this, the 'Wi-Fi' section is visible with its 'Configuración' button. The bottom section contains 'Estadísticas' (a donut chart) and 'Inf. del Dispositivo' (device information). At the very bottom, there are icons for 'Mensajes', 'Agenda', and 'Configuraciones avanzadas', along with a QR code.

© 1998-2021 ZTE Corporation. Todos los derechos reservados | Licencias Open Source | Política de privacidad

Paso 3.

Seleccionar: Modo de conexión WAN.

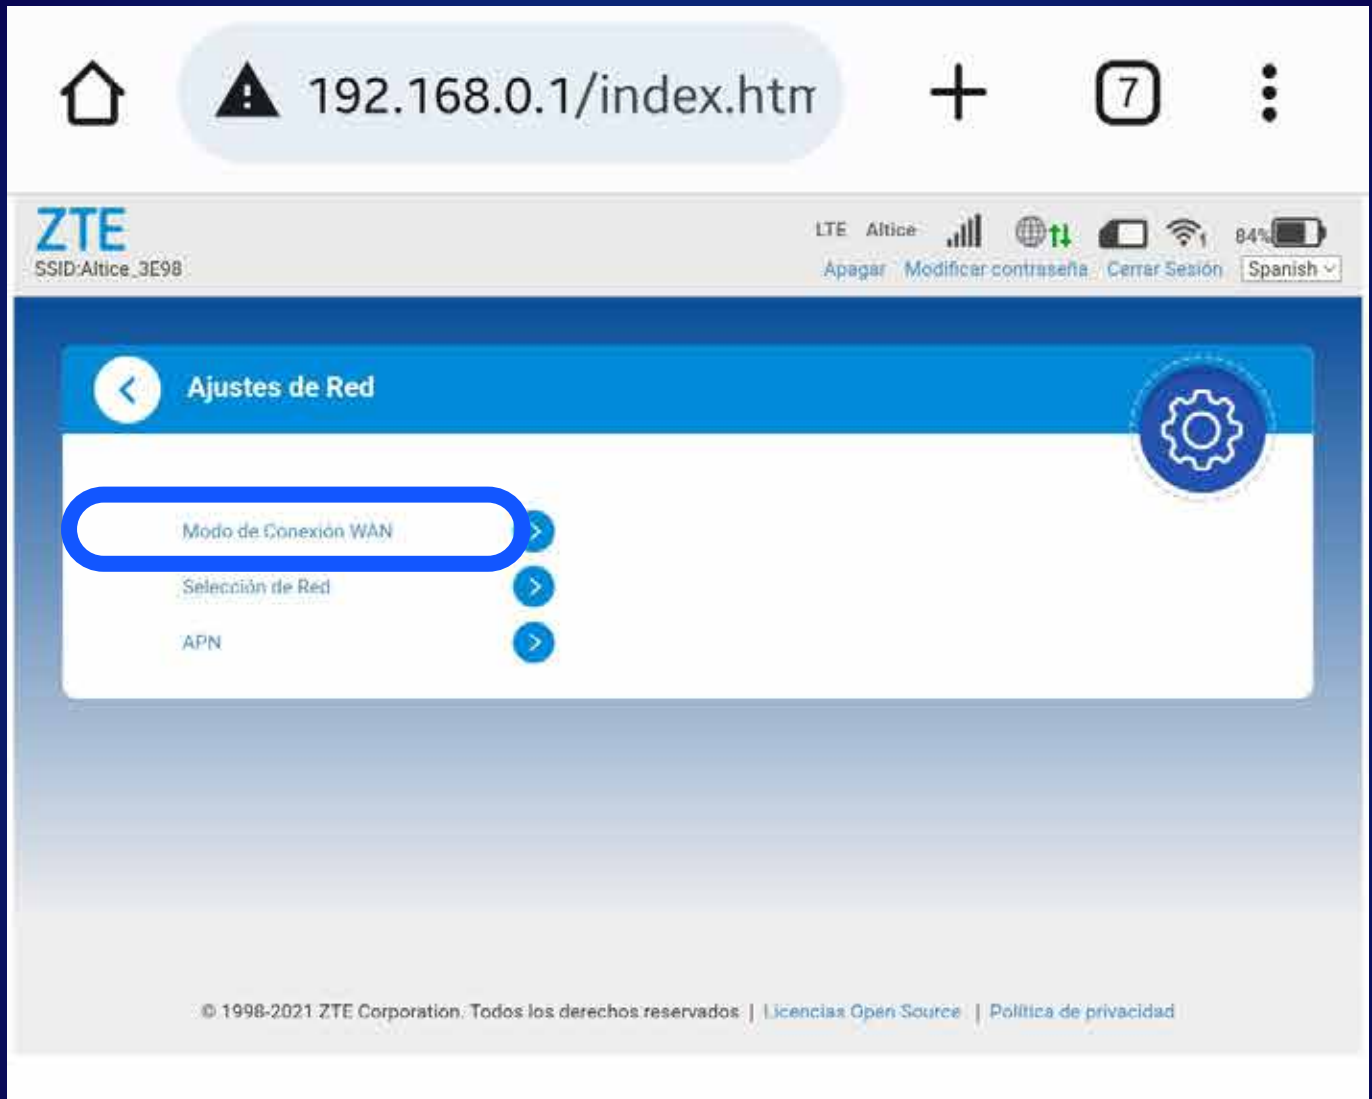

Paso 4.

4.1 Cotejar: Selecciona para permitir conexión a internet en Roaming

4.2 Aplicar

The screenshot shows a mobile web interface for ZTE. At the top, there is a home icon, a warning icon, and the URL `192.168.0.1/index.htm`. Below the URL bar, the ZTE logo and SSID `Altice_3E98` are visible on the left, and network status (LTE, Altice), signal strength, Wi-Fi, and battery (84%) are on the right. The main content area is titled "Modo de Conexión WAN" and contains the following elements:

- Radio buttons for "Automático" (selected) and "Manual".
- A checkbox labeled "Selección para permitir conexión a Internet en Roaming." which is highlighted with a blue circle.
- An "Aplicar" button, also highlighted with a blue circle.
- A red warning message: "Las configuraciones solo pueden ser cambiadas, cuando el modem esta desconectado".
- A help icon (question mark) in a blue circle.

At the bottom of the page, there is a footer with the text: "© 1998-2021 ZTE Corporation. Todos los derechos reservados | [Licencias Open Source](#) | [Política de privacidad](#)".

Paso 5.

Encender switch LTE.

*Comprobar la navegación

The screenshot shows the ZTE router management interface. At the top, the address bar displays "192.168.0.1/index.htm". The ZTE logo and SSID "Altice_3E98" are visible in the top left. The top right shows network status: "LTE Altice", signal strength, Wi-Fi, and battery level (85%).

The main content area is titled "PC | Móvil" and features three numbered sections:

- 1 Dispositivos conectados**: Shows 1 connected device.
- 2 Mi router**: Contains the "LTE" switch, which is currently turned **ON** (highlighted with a red circle). Below it is the "Wi-Fi" switch, which is turned **OFF**.
- 3 Navegación en la red**: Shows network usage statistics: 00:01:42, 47.53Kb/s ↓, 28.07Kb/s ↑, and 0.33MB.

Below the main content, there are two sections:

- Estadísticas**: Shows "Usado" (Used) with a green bar and a note: "No habilitado, click en configuraciones" (Not enabled, click in configurations).
- Inf. del Dispositivo**: Shows device information: IMEI (863317049955408), IMSI (370012016327422), Cobertura WiFi (Larga cobertura Wi-Fi), and Nivel de señal (-66 dBm).

At the bottom, there are three icons: "Mensajes" (Messages), "Agenda" (Calendar), and "Configuraciones avanzadas" (Advanced Settings). A QR code is also present on the right side.

© 1998-2021 ZTE Corporation. Todos los derechos reservados | Licencias Open Source | Política de privacidad